


## WB2X6

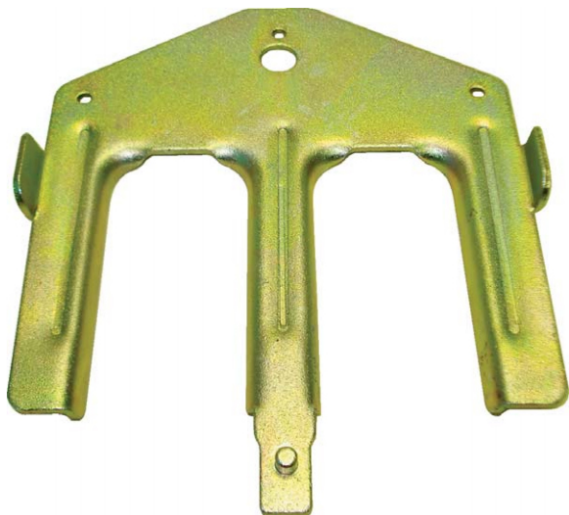

### Installation:

1. Fasten Double Waler Bracket to the studs with double headed nails through the three nail holes provided in the bracket.
2. Insert walers.
3. Secure with Snap Tie Steel Wedge on the steel pin of the Double Waler Bracket.

<b>Part Number</b>	WB2X6
<b>Weight Per Piece (lbs)</b>	1
<b>Carton Quantity</b>	25
<b>Size</b>	(2 x 6)